XAIRCRAFT

MINIX

User Manual

V1.0

CONTENT

www.cnchelicopter.com

XAircraft MiniX Overview 2
- Products Specification 2
  - MiniX Construction 2
  - MiniX Features 3
- MiniX Interface 5
- MiniX Flight Mode 6
- LED Indication 6
- MiniX Quick Guide 7
- Notes for Use 7

Installation 8
- Install MiniX Modules 8
- Connection to Receiver 9
  - Connect to Receiver 9
- Power Supply 9

MiniX Connect with Computer 9
Copter Types MiniX Supports 10
Calibration Mode 12
- Compass Calibration 12
- RC Neutral Point Calibration 14
- RC Reverse Calibration 14
- Motor Start / Stop 15
- Auto Take-off 15
- Height Hold 15
- Attitude Gain 16
- Safe Mode 17
  - Manually Activate Safe Mode 18
  - Fail-safe Setting 18
  - About Home Position 18
  - Get Back the Control 18

MiniX OSD Module 19
Firmware Upgrade and Configuration Software Update 21
Flight Controller Information and Language 22
XAircraft MiniX After-sale Service 23

DISCLAIMER OF LIABILITY

1. Using XAircraft products within the limits permitted by local laws and regulations. XAircraft is not responsible for any illegal activities.
2. The MiniX is an aeromodelling product only. Please strictly follow the aeromodelling safe instruction rules; XAircraft are not responsible for the use and operation of the aircraft.
3. Model aircraft are not toys! Fly under professional guidance and strictly follow instruction rules in this document. XAircraft is not responsible for consequences caused by improper installation, incorrect setting or operation.

.Security Notes

1. Familiarize yourself with flying environment and any obstacles. Identify any potential hazards such as power lines, cars, people, etc.
2. Do not fly the aircraft when fatigued, drunk or your mental state has been compromised which may cause an accident.
3. Stay away from wet areas. Do not fly in the rain or wet environments which can cause device failure and probably lead to danger. Do not fly at night or in windy conditions.
4. Stay away from any fire resulting in damage of the electronic parts or others such as the flight battery.
5. Do not fly alone during your preliminary flights. If you need help, please enlist the aid of an experienced pilot before flying for the first time.
6. Prepare rescue tools such as cell phones or other communication devices should you need to call for help.
7. Please fly under the safe take-off weight, do not overload the aircraft otherwise will lead to danger.
8. Ensure all the equipment operates correctly before flight and that there is no transmitter interference or conflicts.
9. Do not touch any moving or powered parts. Do not try to catch the copter which has rotating motors or blades for example. Keep loose clothing away from moving parts as they may get caught and could cause physical harm.
10. Always throttle down to minimum before flying.
11. Remove the propellers when testing the remote device or motors operation. Attach the propellers after you have tested that everything is working good to prevent an accident.
12. Assemble the aircraft with accessories XAircraft provides. XAircraft is not responsible for any consequence resulted from assembly with other accessories or modifications.

©2013 XAircraft All Rights Reserved.

XAircraft MiniX Overview

XAircraft MiniX is designed for multicopter, support 2 to 8 rotors.

Products Specification

MiniX Construction

Flight Controller System

The Flight Controller is the core of the system and is connected to GPS/compass and RC receiver for flight. It also has the black box flight data recording function which maintains the flight records for 40 minutes allowing users to view and share flight records.

GPS Module

GPS is used to identify the location of the aircraft and it's heading via the compass.

OSD Module

The On Screen Display module is an accessory.

It superimposes flight data over your video image for the pilot*. Aircraft attitude, flight mode, satellite number, height, speed, and voltage alarm information is provided in real time.

*Other equipment required for viewing

©2013 XAircraft All Rights Reserved.

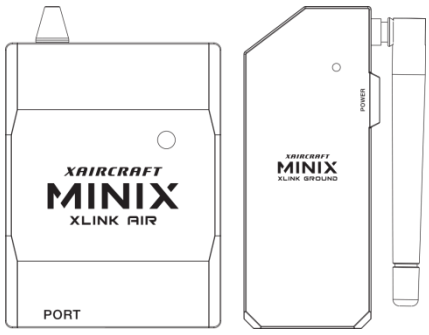

XLINK GROUND STATION

Includes XLINK AIR and XLINK GROUND modules.

XLINK AIR is connected to the FC on the aircraft with XLINK GROUND connected to a computer, mobile phone or tablet to allow route planning by ground station.

MiniX Features

1) Three flight modes supported: Manual ,ATT and GPS
2) ATT and GPS mode offers a high accuracy altitude hold.
3) More security options are available. For example the onboard failsafe can be preset for GO-home, auto landing/hover and can auto land at low voltage.
4) Built-in green configuration software for PC, no need to download any drivers or additional software.
5) Digital ground station communication and control modules allow Android Tablet App operation and flight data.
6) Built-in Black box flight recorder module extension and firmware upgrade support
7) Intelligent low voltage protection

MiniX Technical Parameters:

Performance	Description
Output characteristics	333Hz ESC control frequency defaulted standard ESC UltraPWM output configurable 100HzServo control frequency
Hover precision	Vertical: ±1.0m Horinzontal：±2.0m
Anti-wind capacity	<8m/s (17.9mph / 28.8km/h)
MaximumRudder angular velocity	200°/s
Maximum tilt angle	35°
Maximum lifting speed	±5m/s

©2013 XAircraft All Rights Reserved.

Working environment	-10°C ~ 55°C
Radio	
Configuration software	Windows system ONLY
Super Anti-Magnetic interference	
Bulit-in Black box support	
Configurable UVP support	
SBUS or PPMreceiver (normal types requires SBUS switch module) support	

Module Parameters:

Product	Voltage	Weight	Dimension
FC	Input Voltage : 7V~50.4 V (2S~12S) Output Voltage : 5.8V , ≤3A	21.6g	L : 45.4mm W : 30.15mm H : 17.43mm
GPS	4.8V ~ 6.0V	17.5g	Diameter : 50.6mm H : 16.2mm
OSD	4.8V ~ 6.0V	4.3g	L : 32.7mm W : 18.8mm H : 9.3mm

©2013 XAircraft All Rights Reserved.

MiniX Interface

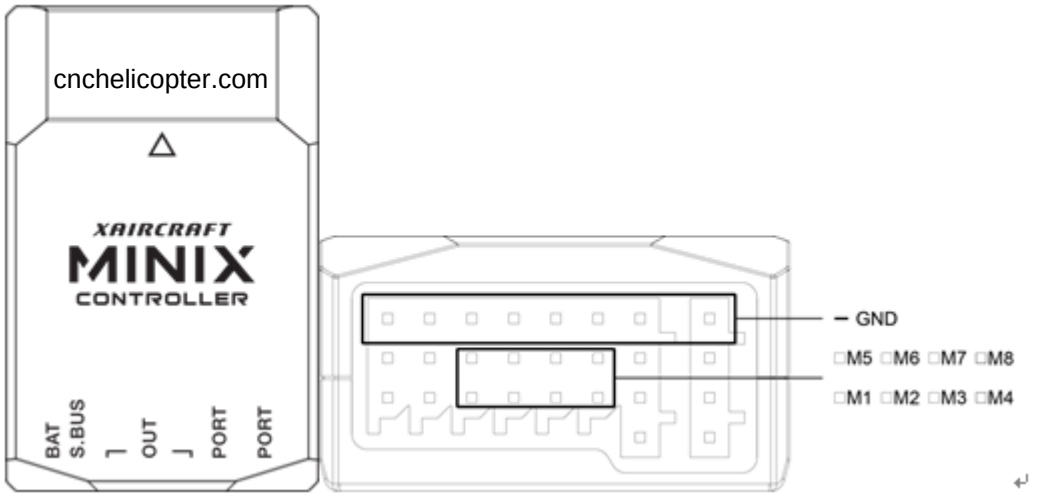

PORT	Function
BAT	Power，Li-Po battery（2S~12S, 7V~55V）
S.BUS	Receiver
OUT(1,5)	M1/M5 ESC（Black/white cable to M1，Red/Orange cable toM5）
OUT(2,6)	M2/M6 ESC（Black/white cable to M2，Red/Orange cable toM6）
OUT(3,7)	M3/M7 ESC（Black/white cable to M3，Red/Orange cable toM7）
OUT(4,8)	M4/M8 ESC（Black/white cable to M4，Red/Orange cable toM8）
PORT	Extension Module
PORT	Extension Module

S.BUS/PPM CHANNEL SETTING

Channel	Description
CH1	AILE / Roll
CH2	ELEV / Pitch
CH3	THROTTLE
CH4	RUDD / Yaw
CH5	Flight Mode
CH6	Safe Mode
CH7	Attitude

©2013 XAircraft All Rights Reserved.

MiniX Flight Mode

Flight Mode	Performance	IO	Explanation
Manual Mode	No Auto-Horizontal ability, no height hold function	M	Not recommended for beginners.
Attitude Mode	Auto-stabilize after sticks released. Height held at throttle center. Pilot commands multirotors position.		
GPS Mode	GPS signal is available with five satellites or more, auto-stabilize after sticks released and enters GPS position hold.Height hold at throttle center.		When M input unconnected, MINIX is in GPS ATT Mode by Default.
	Note, If GPS Module is disconnected, GPS signal lost or weak, or the compass receives interference, ATT mode is entered automatically		
Safe Mode	Autopilot Mode in emergencies, Return to Home (Tail in) and auto landing by default.	S	

LED Indication

Red LED flashing means do NOT fly. Red flashing in the air when RTH not commanded: the pilot should land immediately and check the multi rotor.

	Flight Status	LED
Flight Mode	Manual Mode	Blue flashing
	Attitude Mode	Green flashing
	GPS Mode (Good Signal)	Green-Green flashing
	GPS Mode (No Signal/Signal is weak)	Green-Red flashing
	Safe Mode	Red-red flashing
Calibration	Enter Calibration Mode	Purple flashing
	Calibration Completed	Solid Green

©2013 XAircraft All Rights Reserved.

Firmware Upgrade	Upgrading	Green flashing
Error Status	System initialization or Self-check has failed(System can be initialized in 10mins, it may take a little more in code weather	Solid Red
	System error: module communication failure or RC signal incorrect. Strong interference of magnetic happens in GPS Mode.	Red flashing
	Weak signal or interference of Compass in GPS Mode.	Yellow flashing

MiniX Quick Guide

XAircraft MiniX is an easy-to-use product. User can start to fly after few setups.

1. Install every module according to manual, and then connect the ESC. See: *Copter Types MiniX Supports*. **Notice: do not install the blades in order to personal safety during the setting process.**
2. Connect to configuration software (*MiniX Connect with Computer*) and choose correct copter types and ESC. If you use UltraPWM ESC, please DO select corresponding option. Wrong ESC setting can lead to danger! See: *Copter Types MiniX Supports.*
3. RC Calibration: *Compass Calibration completed when* re-power on.

Notes for Use

- Do not use GPS ATT Mode and Return to Home function in the areas which suffer from magnetic interference, for example, between buildings or indoor .
- If calibration keeps failing check if there is strong magnetic source interfering GPS module
- If you fly in a new place should re-calibrate the GPS Compass Module.

4. RC Neutral Point Calibration, *RC Reverse Calibration.*
5. *Compass Calibration.*
6. Double check whether the wiring of ESC and motor is OK. After motor rotation is confirmed right, install the blades then fly.
7. During the flight, you can use gain knob (G channel) to adjust the aircraft' s auto-leveling performance. Please see the detail: *Attitude Gain*.

©2013 XAircraft All Rights Reserved.

Notes for Use

Due to geographical limit and magnet influence on GPS module, please note:

1. Do not use GPS ATT Mode and Return to Home function in the areas which suffer from magnetic interference, for example, between buildings or indoor.
2. Do not use GPS ATT Mode and Return to Home function in polar region.
3. GPS module should avoid high voltage lines, and keep cables tidy around GPS.
4. When calibrating the compass, you do not have any electronic or magnetic objects such as cell phones.

Installation

Install MiniX Modules

Connect Flight Controller, GPS Module, OSD Module as diagram shows.

©2013 XAircraft All Rights Reserved.

When you see this removable device, it means MiniX is connected to the Computer.

1. Configuration software of MiniX is green software. Just need to run the MiniX.exe file to open it.

Warning: Do not change any file in in the MiniX directory.

Copter Types MiniX Supports

Firmware	Copter type
Standard	Quad copter ((X and + Style) Quad copter (X and + Style) Hexacopter (X, + and Y6 Style) Quad copter (X and + Style) Hexacopter (X, + and Y6 Style) Octacopter (X, + and X8 Style)

©2013 XAircraft All Rights Reserved.

	Supports all kinds of copter types, and custom types.

According to copter and ESC you are using; choose correct Frame and ESC type.

- UltraPWM ESC: for original XAircraft UltraPWM ESC, for X450, X450 Pro, X650 and X650 Value.

Notice: in the following diagram, the arrow direction means to rotation direction of motor and blade. When you install propeller, please make sure its direction downward.

Quadcopter (X and + Style)

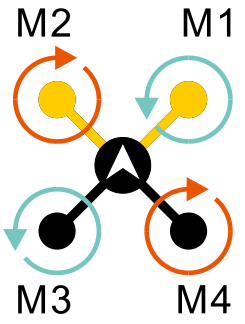

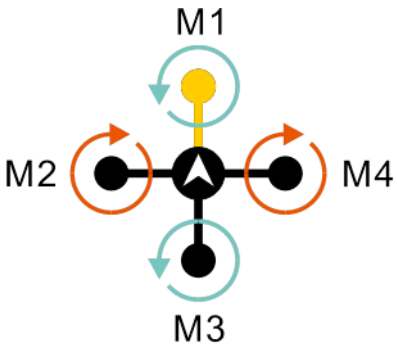

©2013 XAircraft All Rights Reserved.

Hexacopter (X, + and Y6)

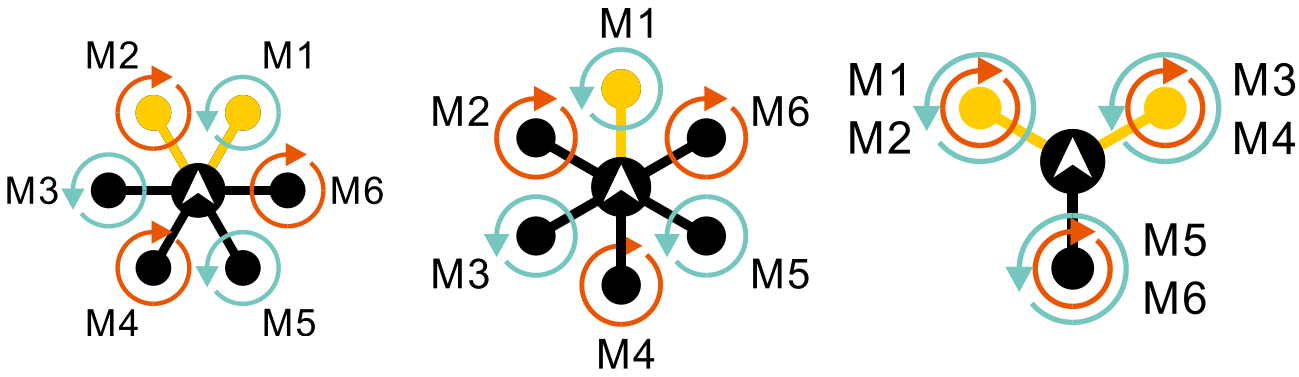

Notice: The outer-race motors are top-motors M1, M3 and M5 of Y6 copter; inter-race are bottom-motors M2, M4 and M6.

Octacopter(X, + and X8)

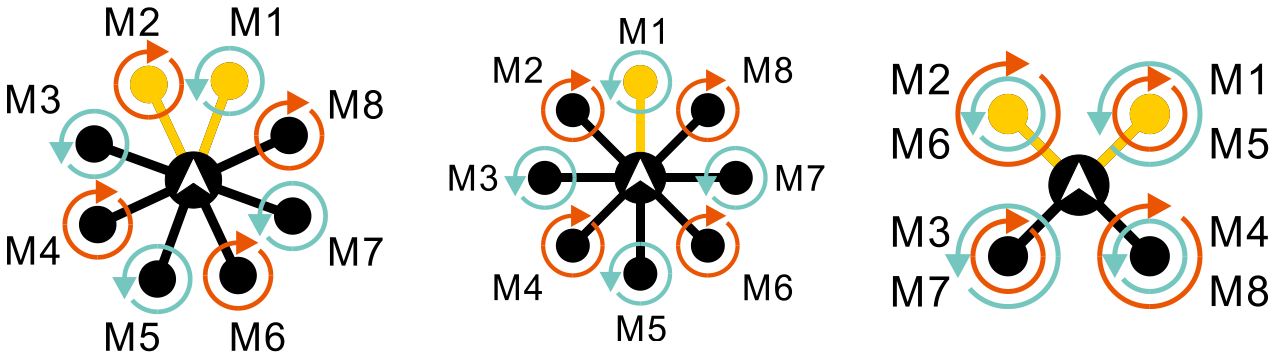

Notice: The outer-race motors are top-motors M1, M2 M3 and M4 of X8 copter; inter-race are bottom-motors M5, M6, M7 and M8.

Calibration Mode

Compass Calibration

- Please make sure GPS wiring and all the channels set up properly in your RC transmitter.
- Cancel all trims on radio before calibration and throttle stick down.
- Rapidly flick the Flight Mode Switch(Channel 5) until purple flashing on LED
- Zero throttle then rapidly altering Mode Switch, LED solid green to enter Compass Calibration.
- Horizontally rotate the aircraft, LED blue slow flashing indicates horizontal calibration completed. Show as below:

©2013 XAircraft All Rights Reserved.

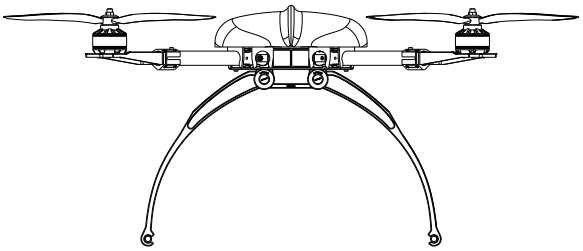

Copter stays horizontal

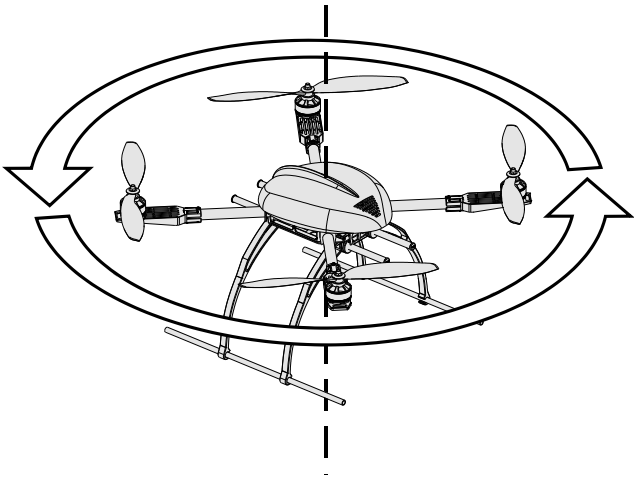

Revolving slowly until slow green LED flashing

- Then vertically rotate until solid green, show as below:

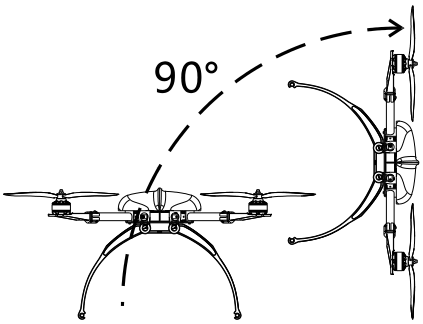

Copter side up

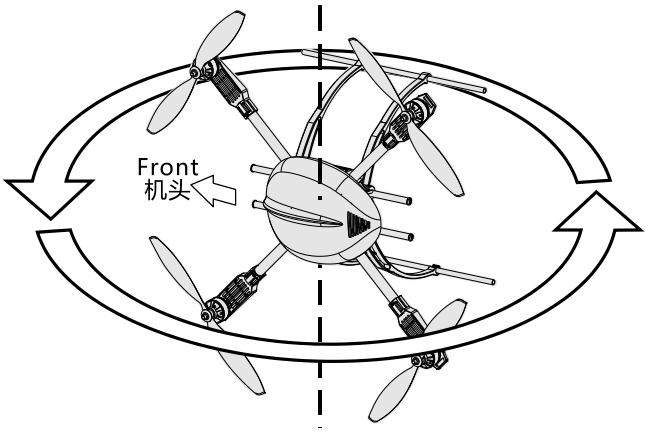

Rotate slowly until LED solid on

- Compass Calibration completed when re-power on.

Notes for Use

- Do not use GPS ATT Mode and Return to Home function in the areas which suffer from magnetic interference, for example, between buildings or indoor .
- If calibration keeps failing check if there is strong magnetic source interfering GPS module
- If you fly in a new place should re-calibrate the GPS Compass Module.

©2013 XAircraft All Rights Reserved.

Motor Start / Stop

Follow diagram as below: Push sticks both **toe-in** or **toe-out** to start motors, then motors are running slowly. If the motors do not start after the operation, please check wiring of receiver and reverse setting of radio.

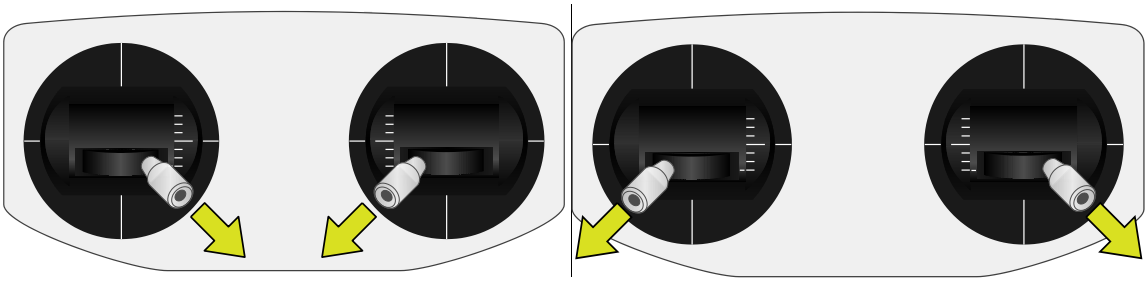

Motor will stop under conditions below:

1) After motors started, if there is no pushing throttle in 3 seconds, another down-inside/down-outside operation can stop the motors immediately.
2) When copter already landed and throttle down to lowest, motors stop immediately.
3) When copter still in the air and throttle down to lowest, motors will stop in 3 seconds.

Notice: After motors stopped in the air, you can push throttle to restart the motors in 3 seconds.

The conditions motor cannot be started:

1) LED shows red or flashes red.
2) LED shows yellow with the weak interference of magnet in GPS Mode.
3) Not connect with receiver in a right way or not calibrate RC reverse correctly.

Auto Take-off

Push throttle to neutral point immediately after motors started, MiniX will auto take -off and hang about on 1.5 meters high. The height hold precision is affected near the ground; some types of small copter can get rid of the ground effect about 1 meter high.

Height Hold

Notice:

1. In manual mode, Height Hold function is unavailable.
2. In other flight modes Height Hold function is always on.

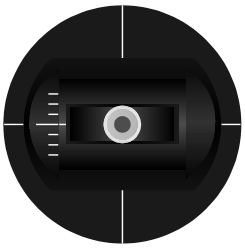

Keep Height when throttle at

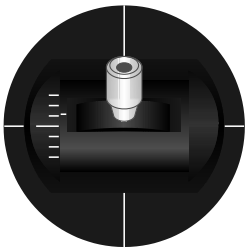

Lifting when throttle higher

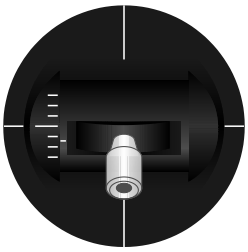

Falling when throttle lower

©2013 XAircraft All Rights Reserved.

OSD Diagram on Screen

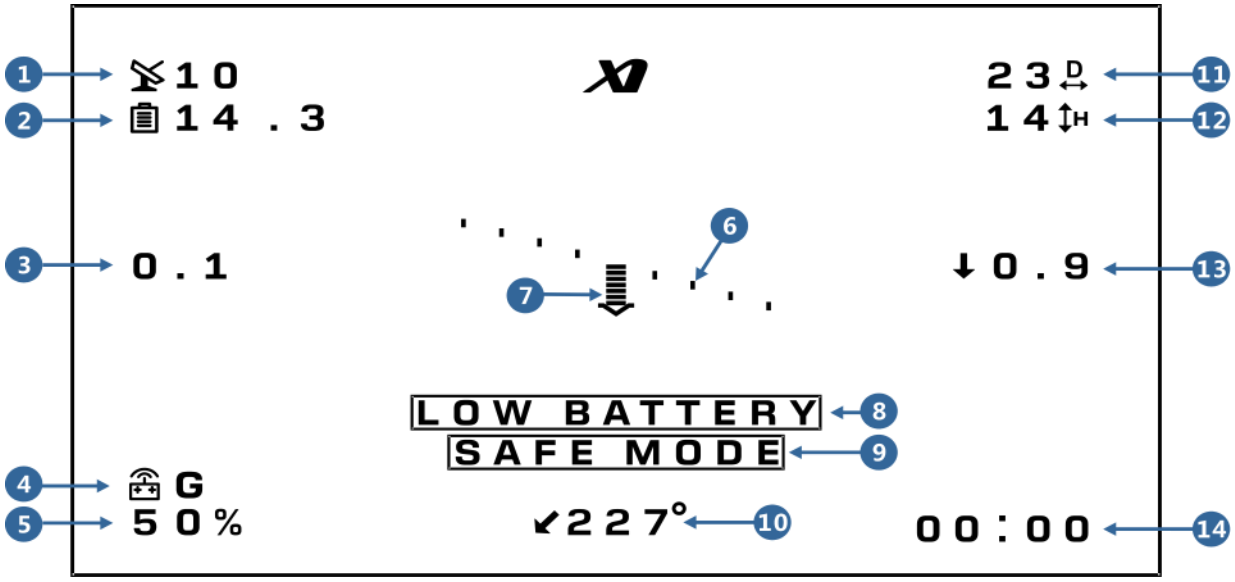

1. **Number of Satellite:** The number of satellite that GPS has picked up. There are 10 satellites in the diagram.
2. **Battery Voltage:** The voltage of battery. The diagram shows that the battery voltage is 14.3V.
3. **Horizontal Velocity:** The present velocity is 0.1m/s in the diagram.
4. **Flight Mode:** It may show M-Manual Mode, A-Attitude Mode, S-Safe Mode, G- GPS Attitude Mode or W-Waypoint Mode. The present status is GPS Mode in the diagram.
5. **Throttle:** It' s 50% throttle in the diagram.
6. **Horizontal Line:** When OSD works at the FPV style, horizontal line can be regarded as real horizon. When OSD works at the gimbal style, horizontal line can be regarded as attitude angle of aircraft. The working mode of OSD can be changed in MiniX configuration software.
7. **Pitch:** Aircraft is at the status of pitching down in the diagram.
8. **Low Battery Alarm:** When the real voltage is lower than configured voltage, OSD raises the alarm. You can set the alarm voltage in MiniX configuration software.
9. **Safe Mode:** When screen flickers this message, MiniX works under safe mode.
10. **Heading:** This heading indicates heading angle related to the take-off point. It' s nose in when it shows 180 degree; and it' s tail in when it shows near 0 or 360 degree.
11. **Horizontal Distance:** The current horizontal distance between aircraft and take-off point (over 4 satellites were found before taking off). The diagram shows 23m from take-off point.
12. **Height:** The current height from the take-off point. The diagram shows the aircraft is at height of 14m.
13. **Vertical Velocity:** A down arrow in the sketch shows that the aircraft is descending at a speed of 0.9m/s.
14. Video Channel: A display of your flight time.

©2013 XAircraft All Rights Reserved.

XAircraft MiniX After-sale Service

1. Warranty Items

1) XAircraft provides a manufacturer's warranty on electronic parts caused by non-accident error or non-human error. It doesn't include the non-electronic parts like cover, wires and so on.
2) The warranty period is 6 months from the date of purchase.
3) During the warranty period, XAircraft will repair or replace for free within the warranty scope.

2. Situations below are NOT INCLUDED in the warranty

1) Users disobey the XAircraft manual while installing or operating your XAircraft products.
2) Performance failure caused by worn-out, misuse, improper operation or chemical reagent.
3) Performance failure caused by intermixed with non-XAircraft Parts.
4) Performance failure caused by modifications.
5) Performance failure on electronic device caused by liquid damage-in.
6) Performance failure caused by electronic interference.
7) Performance failure on electronic parts caused by using low quality battery or choosing an unreasonable voltage source.
8) Performance failure caused by incidents or human error such as transportation, collision, improper operation or connecting to a wrong voltage source.
9) Performance failure caused by irresistible force including but not limited by fire, earthquake, lightning and so on.
10) Damage or loss during the shipping. Please consult to the relevant logistics corporation.

3. Procedure of Service

1) When your XAircraft products have performance failure, please contact distributor/seller immediately in order to confirm the failure condition, the range and way of service. You can email us: service@xaircraft.com. At the same time, you have to offer some evidence and details:
   a) Proof-of-Purchase of XAircraft product.
   b) Product ID, you can find it in the configuration software.
   c) Description in details such as the weather, environment, operation and aircraft motion.
   d) Your contact information.
2) XAircraft or global distributor/seller strictly follows the warranty items to confirm the scope of service.
3) Users may have to pay for the repair necessary according to damage assessment which

©2013 XAircraft All Rights Reserved.